



POWER SOURCE AMMUNITION Box / POUCH MANUAL


CO2 Supply mod install / CO2 供氣模組安裝

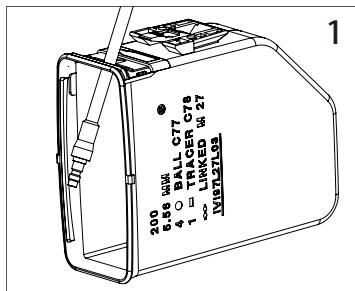


1. Insert the adapter on ammo box.
如圖先將接器嘴座編織管卡進彈箱。

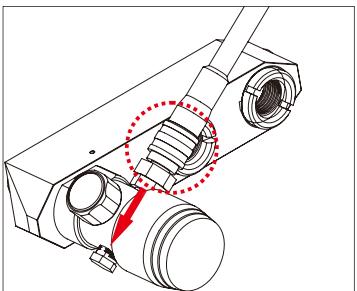


2. Install the adapter on the supply mod.
將CO2模組接氣嘴座後退，
並插入接器嘴座編織管接口。

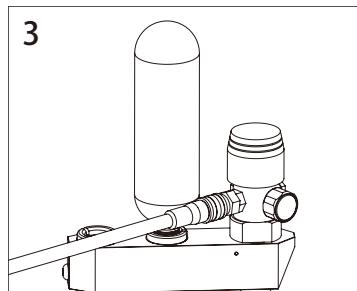


3. Screw the CO2 canister.
鎖上CO2鋼瓶。

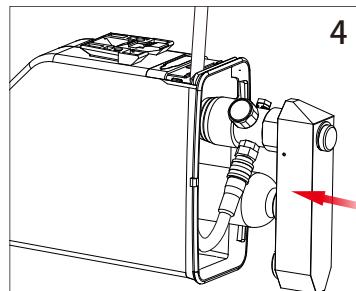


4. Replace the supply mod into the ammo box.
如圖將CO2模組置入彈箱，
並注意不要折到接器嘴座編織管。

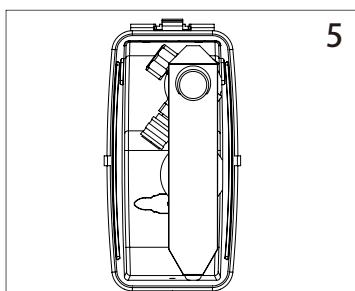


5. Place the module on one side to adjust the adapter.
CO2模組置入彈箱時，請靠一側擺放，
另一側空間放置編織管。

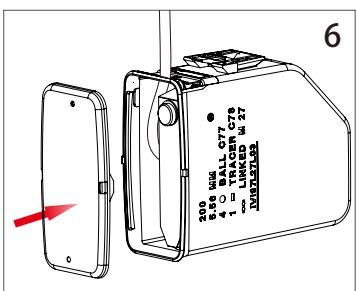


6. Close the ammo box cover.
蓋上彈箱蓋。

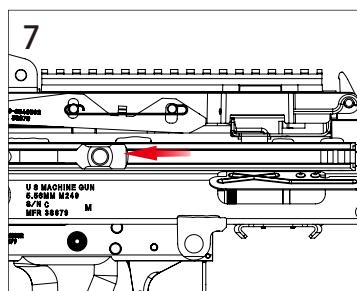


7. Pull the charging handle to hold open the bolt than reset it.
拉動槍機拉柄並復位，確定槍機已固定在後。

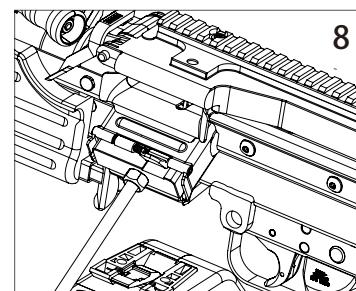


8. Put the valve adapter into the magazine well.
先將接氣座放入彈匣井對位。

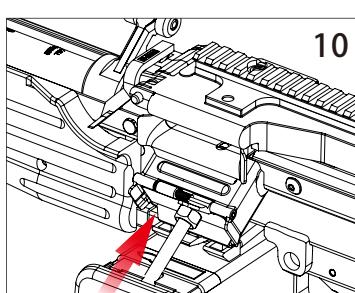

10. Make sure the ammunition box and the main receiver are fixing than insert the valve adapter.
確認彈箱與機槍本體已固定後，
將接氣座插入彈匣井至確實固定。

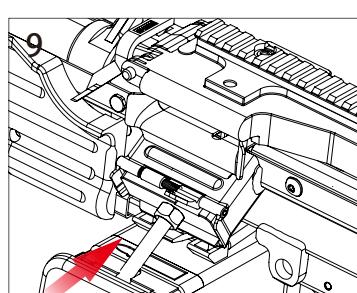

9. Install the ammunition box under the main receiver.
將彈箱安裝於機槍本體下。

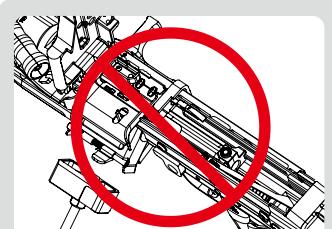

CAUTION:
When the bolt is in the front position,
do not insert any power supply parts
to avoid unintentional fire.
槍機位置在前時，
請勿插入供氣部件，避免造成誤擊。



CAUTION:
When the safety is on, do not pull the
charging handle to avoid the
mechanical damage.
請勿在保險開啟時拉動槍機，
避免造成機構損壞。

CAUTION / WARNING

1. Keep hands and face at a safe distance from the escaping gas.
2. Escaping CO2 may cause icing.
3. CO2 may explode if exposed to temperatures exceeding 50 °C.
4. Check canister for any cracks or leaks before using.
5. Do not boil canister.
6. Keep canister away from direct sunlight.
7. Do not leave canisters inside the vehicle.

1. 注意洩漏的氣體，避免肢體和臉部過於靠近。
2. 洩漏的氣體可能會導致結霜。
3. 如果暴露在超過攝氏50度的溫度下，可能導致鋼瓶過度膨脹或爆炸。
4. 使用前，請檢查鋼瓶是否有裂紋或洩漏。
5. 請勿直接加熱鋼瓶。
6. 鋼瓶請避免陽光直射並存放於室內陰涼處。
7. 請勿將鋼瓶留在車內。

2024.09.11



VegaForce Company
<http://www.vegaforce.com>

For Airsoft use only. Made in Taiwan